User's Manual

E1/E20 Emulator

Additional Document for User's Manual (Notes on Connection of RH850/F1H and RH850/F1M)

Supported Devices:
RH850 Family RH850/F1x Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Renesas Electronics
www.renesas.com

Rev.4.00 Oct 2015

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
   Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: “Standard” and “High Quality”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below.

   “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.

   “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti- crime systems; and safety equipment etc.

   Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority- owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

Contents

1. Outline 4
1.1 Features of an E1 or E20 emulator 4
1.2 Caution on using the E20 emulator 4
1.3 Configuration of manuals 4
2. Connecting the Emulator and User System 5
2.1 Connector mounted on the user system 5
2.2 Pin assignments of the connector 6
2.3 Examples of recommended connections between the connector and MCU 7
2.3.1 Example of recommended connections 7
2.3.2 Connecting the RESET pin 13
2.3.3 Connecting the TVDD pin 14
2.3.4 Hot plug-in adapter for the E1 emulator 15
2.3.5 Isolator for the E1 emulator 15
2.3.6 Small connector conversion adapter for the E1 emulator 15
3. Specifications 16
4. Notes on Usage 18
4.1 Notes on differences in operation between the actual device and the E1 or E20 emulator 18
4.2 Cautionary notes on debugging 20
5. Internal Circuits of the Emulator 28

1. Outline

1.1 Features of an E1 or E20 emulator

An E1 or E20 emulator is an on-chip debugging emulator that includes a flash programming function, which is used for debugging and programming programs to be embedded in microcontrollers that have on-chip flash memory. That is, either product can debug a program while the target microcontroller is connected to the user system, and can write programs to the on-chip flash memory of microcontrollers.

1.2 Caution on using the E20 emulator

The functions used for debugging of the RH850 family by using the E20 emulator are the same as in the E1 emulator. Large trace function, characteristic function of the E20 emulator, cannot be used.

1.3 Configuration of manuals

Documentation for the E1 or E20 emulator manual is in two parts: the E1 or E20 Emulator User's Manual and E1 or E20 Emulator Additional Document for User's Manual (this manual). The additional document is for a particular set of MCUs (in this case, MCUs of the RH850/F1H and RH850/F1M groups). Be sure to read both of the manuals before using the E1 or E20 emulator.

(1) E1 or E20 emulator user's manual

The E1/E20 Emulator User's Manual describes hardware specifications including the following items:

- Components of the emulators
- Emulator hardware specifications
- Connecting the emulator to a host computer and user system

(2) E1 or E20 emulator additional document for user's manual

An E1 or E20 Emulator Additional Document for User's Manual describes functions of a debugger, and its contents depend on the given set of MCUs. In general, an additional document has notes on items including the following:

- For use in hardware design, an example of connection and the interface circuits required to connect the emulator.
- Notes on using the emulator

2. Connecting the Emulator and User System

To connect the E1 or E20 emulator, a connector for the user system interface cable must be mounted on the user system. When designing the user system, read this chapter of this manual and the hardware manual for the MCUs to be used.

2.1 Connector mounted on the user system

Table 2-1 shows the recommended connectors for connection of the E1 or E20 emulator.

Table 2-1 Recommended Connectors

	Type Number	Manufacturer	Specification
14-pin connector	7614-6002	Sumitomo 3M Limited	14-pin straight type (Japan)
	2514-6002	3M Limited	14-pin straight type (other countries)

Figures 2-1 shows an example of the connection of the user system interface cable of an E1 emulator to a 14-pin connector. If you intend to use the 14-pin connector, do not mount components with heights exceeding 10 mm within 5 mm of the connector on the user system. Note that this connector does not support direct connection of an E20 emulator, which has a 38-pin connection. To use an E20 emulator with a 14-pin connector, use the 38-pin/14-pin conversion adapter [R0E000200CKA00] that comes with the E20.

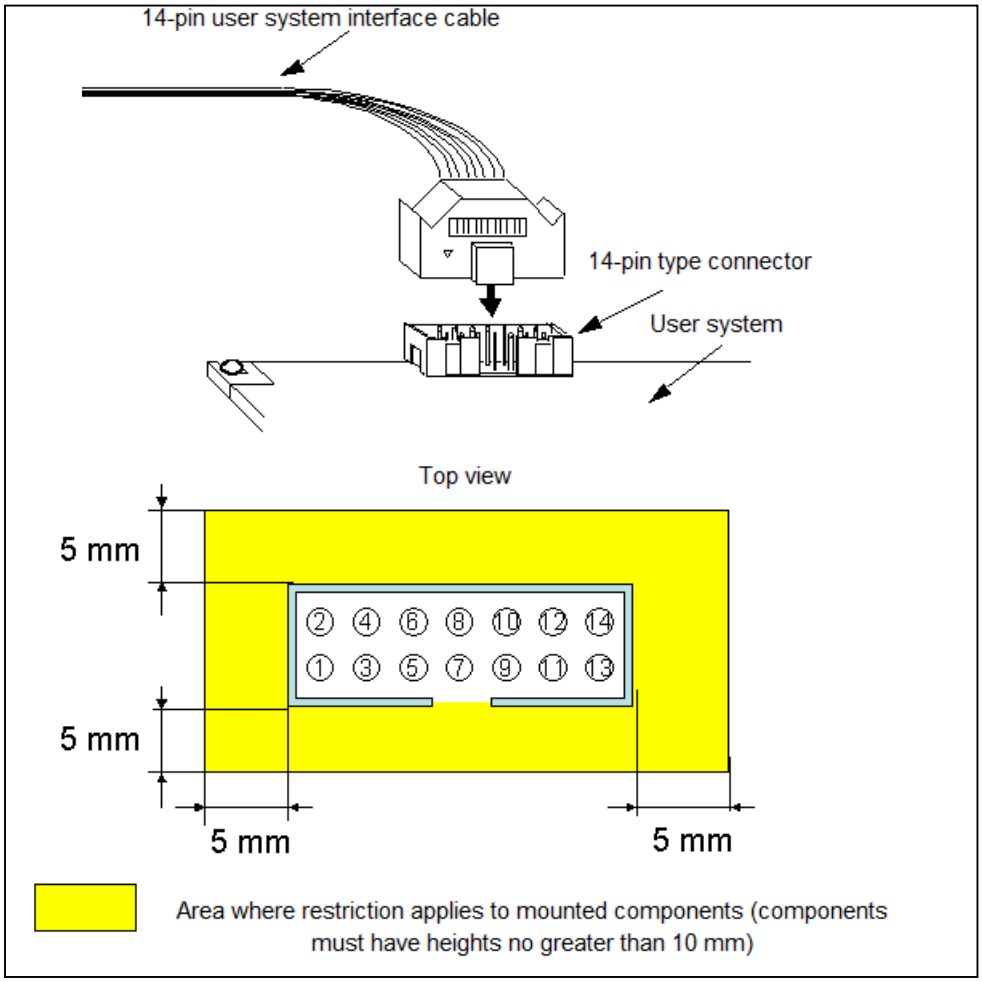
14-pin user system interface cable
14-pin type connector
User system
Top view
5 mm
5 mm
5 mm
5 mm
② ④ ⑥ ⑧ ⑩ ⑫ ⑭
① ③ ⑤ ⑦ ⑨ ⑪ ⑬
Area where restriction applies to mounted components (components must have heights no greater than 10 mm)

Figure 2-1 Connecting the User System Interface Cable to the 14-pin Connector in the E1 or E20 Emulator

CAUTION

Note on connector insertion and removal:

When connecting or disconnecting the user-system interface cable and the emulator or user system, grasp the connector cover at the end of the cable. Pulling the cable itself will damage the wiring.
Also, be aware that the user-system interface cable has the direction in which it must be inserted. If the cable is connected in the wrong direction, it may be damaged.

2.2 Pin assignments of the connector

Table 2-2 shows the pin assignments of the 14-pin connector.

Table 2-2 Pin Assignments of the 14-pin Connector

Pin No.	Signal name (#:active low)				I/O (*3)
	Debugging		Programming		
	4-pin LPD	1-pin LPD	2-wire UART	1-wire UART	
1	LPDCLK	—	—	—	Input
2 (*1)	GND	GND	GND	GND	—
3	—	—	—	—	—
4	FPMD0	FPMD0	FPMD0	FPMD0	Input
5	LPDO	—	FPDT	—	Output
6	—	—	—	—	—
7	LPDIO	LPDIO	FPDR	FPDR	I/O
8	TVDD	TVDD	TVDD	TVDD	—
9	—	—	—	—	—
10	—	—	—	—	—
11	LPDCLKO	—	—	—	Output
12 (*1)	GND	GND	GND	GND	—
13 (*2)	RESET#	RESET#	RESET#	RESET#	Input
14 (*1)	GND	GND	GND	GND	—

Notes 1. Securely connect pins 2, 12, and 14 of the connector to GND of the user system. These pins are used for electrical GND and to monitor connection with the user system by the E1 or E20 emulator.
2. Be particularly sure to connect pin 13 before using the emulator.
3. Input and output are defined from the perspective of the user system.

2.3 Examples of recommended connections between the connector and MCU

This section describes examples of recommended connections between the target MCU and interface circuit.

2.3.1 Example of recommended connections

Multiple recommended examples for connection are given in accord with the purposes for which the emulator is to be used. Select the appropriate circuit with reference to the table shown below. Be sure to take the specifications of the target device as well as measures to prevent noise into consideration when designing your circuit.

Purpose	Figure
Both debugging (4-pin LPD) and programming (1-wire UART or 2-wire UART)	Figure 2-2
Both debugging (1-pin LPD or 4-pin LPD) and programming (1-wire UART or 2-wire UART)	Figure 2-3
Both debugging (1-pin LPD) and programming (1-wire UART)	Figure 2-4
Only programming (1-wire UART or 2-wire UART)	Figure 2-5
Only programming (1-wire UART)	Figure 2-6

(1) Connection which allows Both debugging (4-pin LPD) and programming (1-wire UART or 2-wire UART)

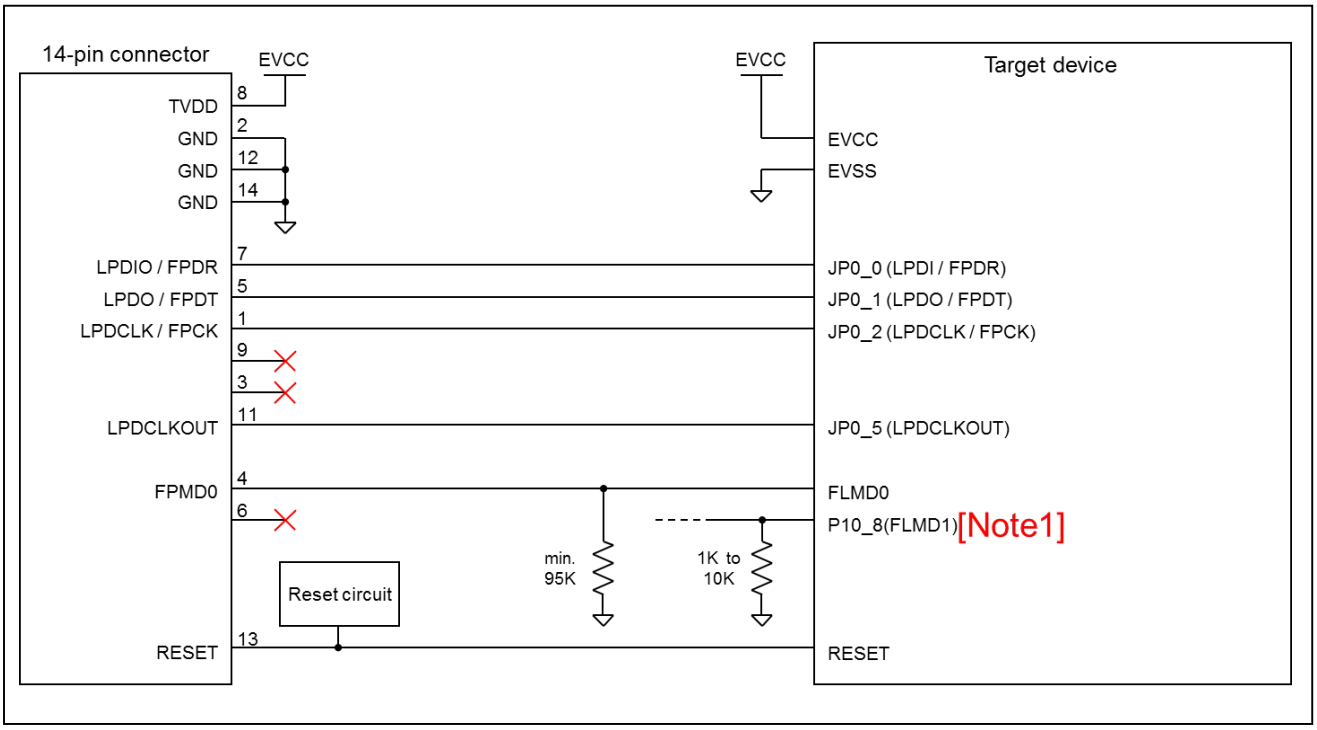

Figure 2-2 Example of Connection

- Refer to section 2.3.2, Connecting the RESET pin, for more information on the reset circuit.
- For details on TVDD, refer to section 2.3.3, Connecting the TVDD pin.
- Make wiring runs between the 14-pin connector and target device as short as possible (within 50 mm is recommended). Do not connect the signal lines between the connector and MCU to other signal lines.
- Use GND to apply a guard ring for the wiring which runs between the 14-pin connector and target device. Do not route high-speed signal lines parallel to each other or allow them to cross each other.
- Pin names may vary among target devices. Refer to the user's manual for the target device you are using for the actual pin names.
- Proceed with appropriate processing for pins of target devices which do not require connection to the emulator in accord with the descriptions in "Handling of Unused Pins" in the user's manual for the target device.

Note 1: Design the circuit so that the FLMD1 pin must be at the low level during programming.

(2) Connection which allows Both debugging (1-pin LPD or 4-pin LPD) and programming (1-wire UART or 2-wire UART)

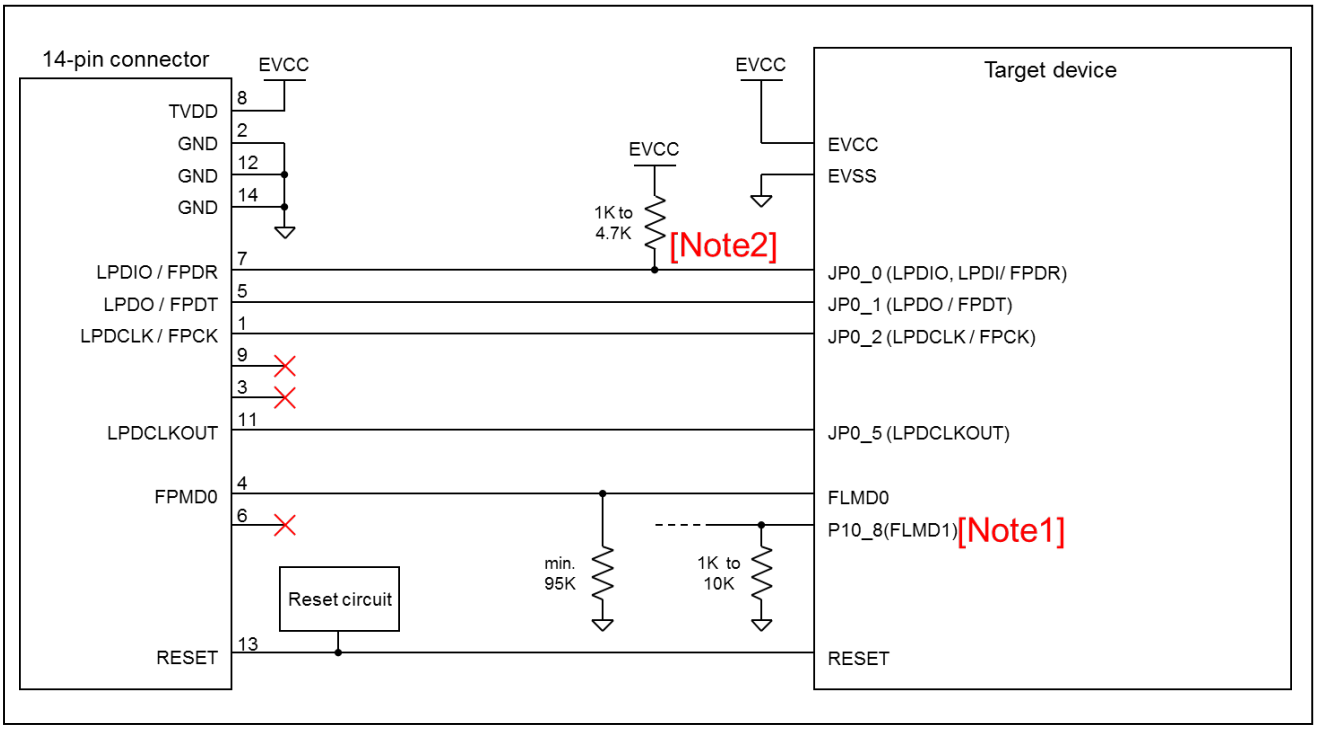

Figure 2-3 Example of Connection

- Refer to section 2.3.2, Connecting the RESET pin, for more information on the reset circuit.
- For details on TVDD, refer to section 2.3.3, Connecting the TVDD pin.
- Make wiring runs between the 14-pin connector and target device as short as possible (within 50 mm is recommended). Do not connect the signal lines between the connector and MCU to other signal lines.
- Use GND to apply a guard ring for the wiring which runs between the 14-pin connector and target device. Do not route high-speed signal lines parallel to each other or allow them to cross each other.
- Pin names may vary among target devices. Refer to the user's manual for the target device you are using for the actual pin names.
- Proceed with appropriate processing for pins of target devices which do not require connection to the emulator in accord with the descriptions in "Handling of Unused Pins" in the user's manual for the target device.

Note 1: Design the circuit so that the FLMD1 pin must be at the low level during programming.

Note 2: Pulling up of JP0_0 is only necessary if you are using 1-pin LPD. If you are not using 1-pin LPD, make the connections shown in Figure 2-2.

(3) Connection which allows Both debugging (1-pin LPD) and programming (1-wire UART)

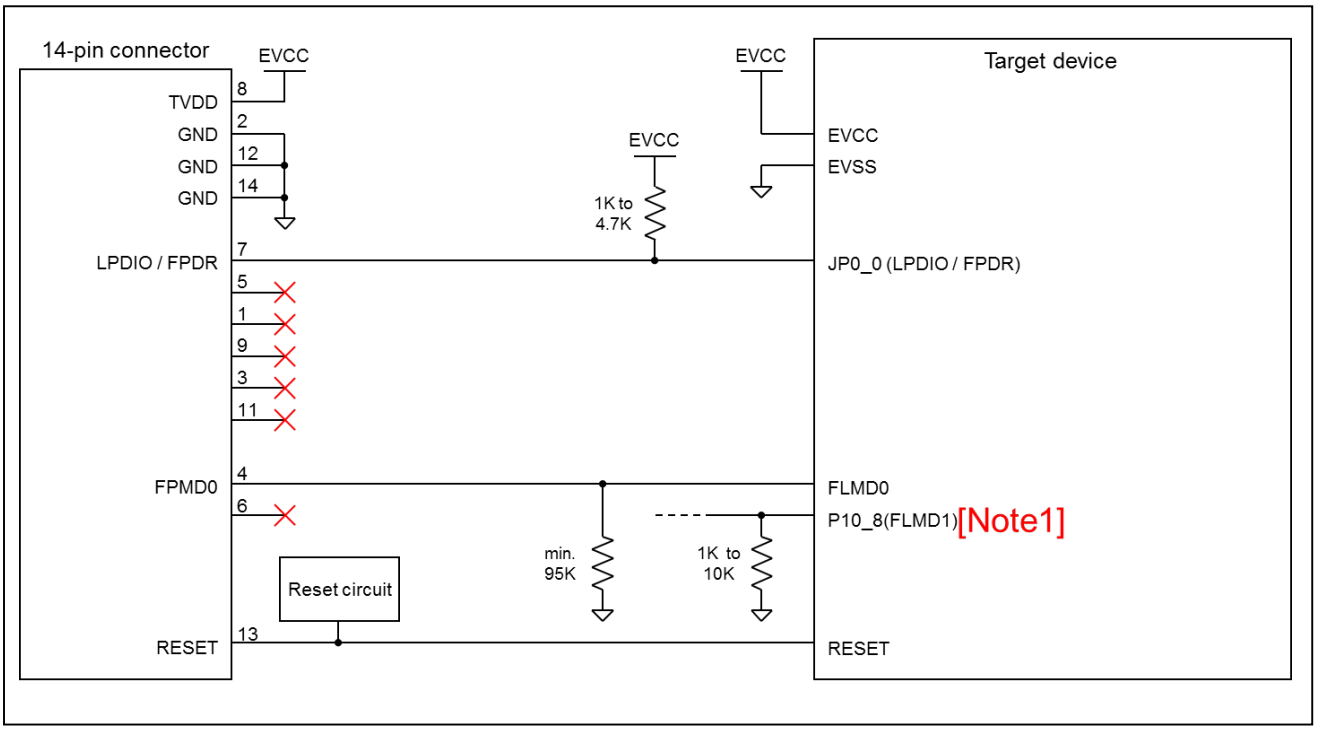

Figure 2-4 Example of Connection

- Refer to section 2.3.2, Connecting the RESET pin, for more information on the reset circuit.
- For details on TVDD, refer to section 2.3.3, Connecting the TVDD pin.
- Make wiring runs between the 14-pin connector and target device as short as possible (within 50 mm is recommended). Do not connect the signal lines between the connector and MCU to other signal lines.
- Use GND to apply a guard ring for the wiring which runs between the 14-pin connector and target device. Do not route high-speed signal lines parallel to each other or allow them to cross each other.
- Pin names may vary among target devices. Refer to the user's manual for the target device you are using for the actual pin names.
- Proceed with appropriate processing for pins of target devices which do not require connection to the emulator in accord with the descriptions in "Handling of Unused Pins" in the user's manual for the target device.

Note 1: Design the circuit so that the FLMD1 pin must be at the low level during programming.

(4) Connection which allows Only programming (1-wire UART or 2-wire UART)

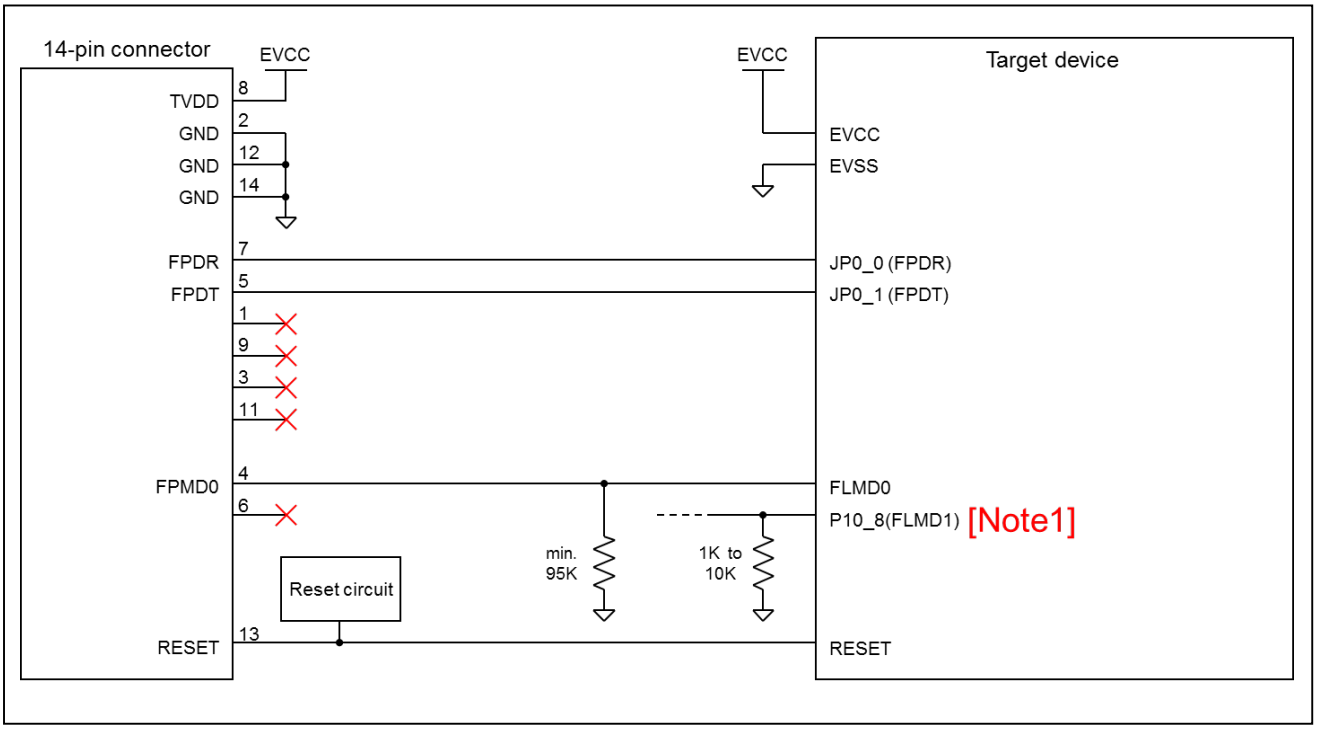

Figure 2-5 Example of Connection

- Refer to section 2.3.2, Connecting the RESET pin, for more information on the reset circuit.
- For details on TVDD, refer to section 2.3.3, Connecting the TVDD pin.
- Make wiring runs between the 14-pin connector and target device as short as possible (within 50 mm is recommended). Do not connect the signal lines between the connector and MCU to other signal lines.
- Use GND to apply a guard ring for the wiring which runs between the 14-pin connector and target device. Do not route high-speed signal lines parallel to each other or allow them to cross each other.
- Pin names may vary among target devices. Refer to the user's manual for the target device you are using for the actual pin names.
- Proceed with appropriate processing for pins of target devices which do not require connection to the emulator in accord with the descriptions in "Handling of Unused Pins" in the user's manual for the target device.

Note 1: Design the circuit so that the FLMD1 pin must be at the low level during programming.

(5) Connection which allows Only programming (1-wire UART)

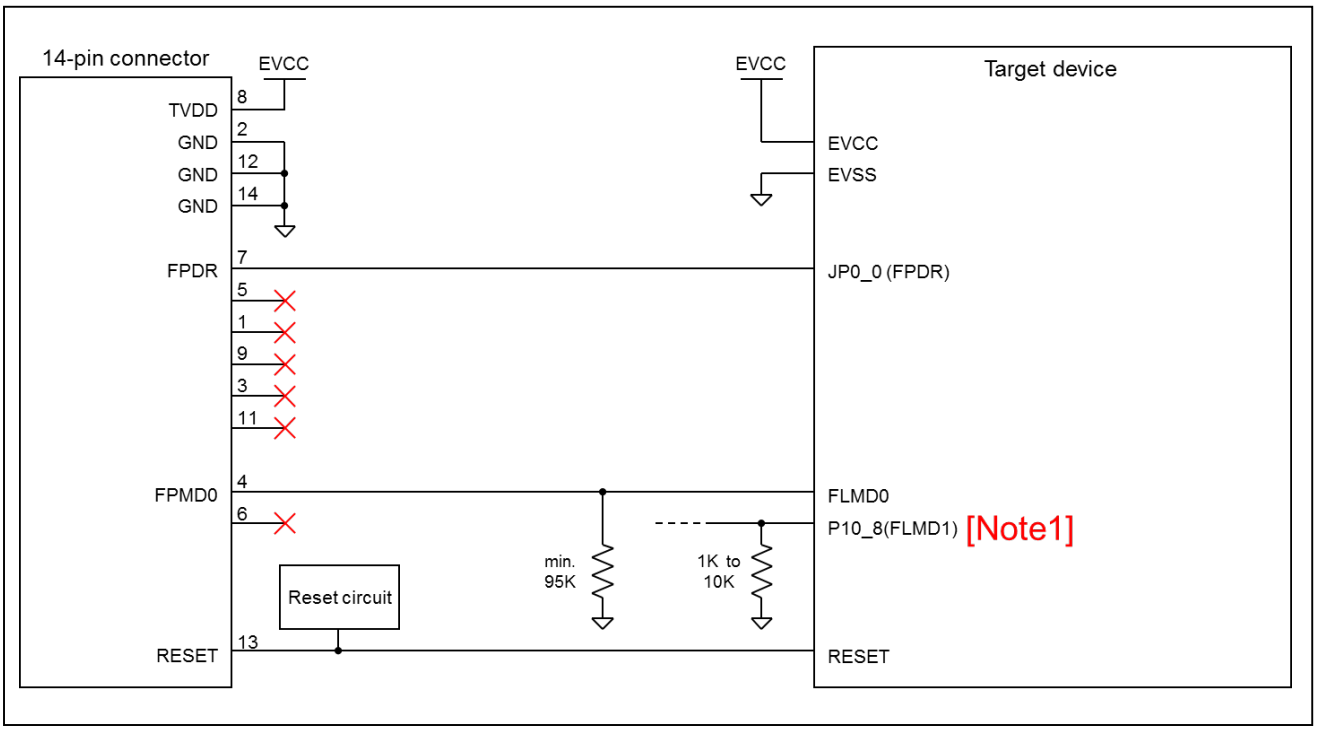

Figure 2-6 Example of Connection

- Refer to section 2.3.2, Connecting the RESET pin, for more information on the reset circuit.
- For details on TVDD, refer to section 2.3.3, Connecting the TVDD pin.
- Make wiring runs between the 14-pin connector and target device as short as possible (within 50 mm is recommended). Do not connect the signal lines between the connector and MCU to other signal lines.
- Use GND to apply a guard ring for the wiring which runs between the 14-pin connector and target device. Do not route high-speed signal lines parallel to each other or allow them to cross each other.
- Pin names may vary among target devices. Refer to the user's manual for the target device you are using for the actual pin names.
- Proceed with appropriate processing for pins of target devices which do not require connection to the emulator in accord with the descriptions in "Handling of Unused Pins" in the user's manual for the target device.

Note 1: Design the circuit so that the FLMD1 pin must be at the low level during programming.

2.3.2 Connecting the RESET pin

While you are using the E1 or E20 emulator, pin 13 (RESET pin) of the 14-pin connector must be connected to the reset pin of the target device. Figure 2-7 below shows an example.
The E1 or E20 emulator fixes the RESET pin to the low level before the debugger is activated. After the debugger is activated, the emulator either keeps the pin at the low level or places it in the high-impedance state in accord with the operation of the debugger.

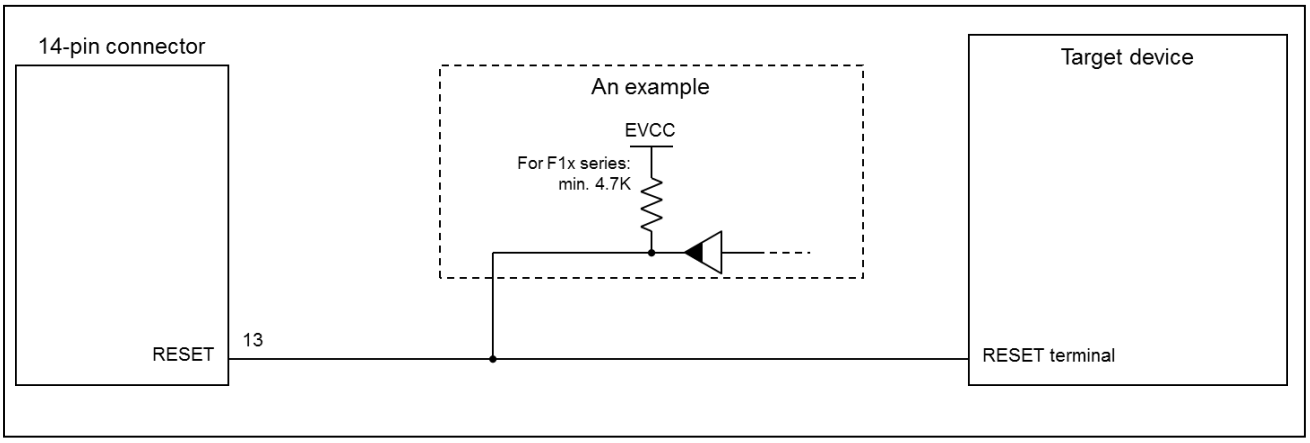

Figure 2-7 Example of Connecting Reset Circuit

- Output of the reset circuit should be either n-channel open drain or be a signal generated solely by a resistor and capacitor (and possible other components).
- The maximum sink current accepted by the RESET pin of the E1 or E20 emulator is 2 mA. Select an appropriate pull-up resistance which does not surpass this value.
- In the RH850/F1x series, pull the RESET signal up to the EVCC voltage.
- Adjust the time constant of the reset circuit so that the time elapsing before the signal reaches 80% of the high level from the low level is within 900 μs.
- When you use hot plug-in, consider installation of a capacitor between the reset signal and GND in order to suppress a noise. In this case, however, the specifications of the time described above must be satisfied.

2.3.3 Connecting the TVDD pin

(1) Power source monitoring function

Connect the power source on the user system to pin 8 (TVDD pin) of the 14-pin connector. For the RH850/F1x series, this will be the source of the EVCC voltage.
The power source connected to the TVDD pin provides power to the final stage output buffer and first stage input buffer on the E1/E20 emulator circuit. When the E1 or E20 emulator is connected, it will draw current as described below in addition to the current drawn by the user system.

- E1 emulator: Approx. 20 mA when TVDD is 3.3 V, and approx. 40 mA when TVDD is 5.0 V
- E20 emulator: Approx. 40 mA when TVDD is 3.3V, and approx. 100 mA when TVDD is 5.0 V

If there is a possibility you will be using hot plug-in, you will need to configure the circuit as shown below.
Pin 8 of the E1 emulator is connected to a 4.7-uF capacitor as shown in (1) in Figure 2-8, so hot plug-in connection of the emulator may lead to a momentary drop in the power-supply voltage on the user system. This might cause the MCU to be reset.
As shown in (2) in Figure 2-8, this effect can be reduced by placing a ferrite bead (or inductor) and relatively large capacitor with low equivalent series resistance near the TVDD line of the connector for connection of the emulator. Note that this measure will not completely eliminate the voltage drop. Note that hot plug-in is only for use during debugging, and a separately sold hot plug-in adapter is necessary to use this function otherwise.

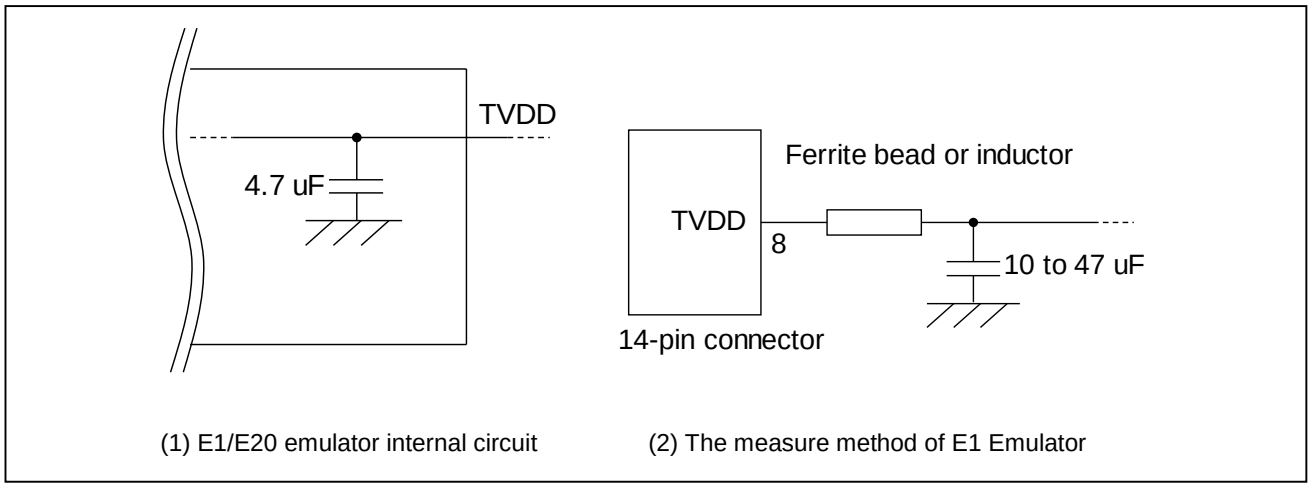

Figure 2-8 Circuit Configuration for Hot Plug-in

(2) Power supply function (applies only to the E1 emulator)

The E1 emulator can also supply power at 3.3 V or 5.0 V from the TVDD pin to the user system (at a current of up to 200 mA). When using this function, take care of the following points.

- Do not use this function if power is being separately supplied to the user system. Attempting to do so might break the E1 emulator.
- Do not use this function for a user system which draws a current of 200 mA or more. The E1 emulator or USB interface of the host machine might be broken.
- Make sure that the supplied voltage is within the voltage range required by the user system.
- The 5.0-V supply depends on the voltage of the USB interface (VBUS) of the host machine. Depending on the environment of the host machine in use, the voltage might be lower than 5.0 V by 0.5 V or more.

Power supply from the E1 emulator depends on the quality of the USB power supply of the host machine, and as such, precision is not guaranteed. When writing a program that requires reliability, do not use the power supply function of the E1 emulator. Use a stable, separate power supply for the user system. When writing a program for mass production processes, use the Renesas Flash Programmer.
For details on the flash programming software, refer to
http://www.renesas.com/products/tools/flash_prom_programming/ .

WARNING

Warning for Turning the Power On/Off:

When supplying power, ensure that there are no shorts between the user system and power circuit. Only connect the E1 or E20 after confirming that there are no mismatches of alignment on the user system port connector. Incorrect connection will result in the host machine, the emulator, and the user system emitting smoke or catching fire.

2.3.4 Hot plug-in adapter for the E1 emulator

For hot plug-in connection, use the hot plug-in adapter for the E1 emulator (R0E000010ACB00) that is separately available from Renesas.

2.3.5 Isolator for the E1 emulator

For a debugging environment where there is a difference in potential between the GND of the user system and that of the host PC, use the isolator for the E1 emulator (R0E000010ACB20) which is separately available from Renesas.

2.3.6 Small connector conversion adapter for the E1 emulator

A small connector conversion adapter for the E1 emulator (R0E000010CKZ11) is separately available from Renesas for user system boards which are too small to mount the 14-pin connector that is the standard connector for the E1 emulator. By using the adapter, you can reduce the area taken up by the connector mounted on your system.
However, when you use the small connector conversion adapter for the E1 emulator, be aware that the pin assignments of the connector differ from those of the standard interface connector for the E1 emulator.

3. Specifications

Specifications are shown in the table below.

Broad Category	Medium Category	Narrow Category	Specification
Hardware in general	Corresponding host machine		Computer equipped with a USB port, OS depends on the debugger
	User system interface		14-pin connector
	Host machine interface		USB 2.0 (full speed or high speed)
	Connection to the user system		Connection by the provided user system interface cable
	Power supply function (only when the emulator is an E1)		3.3 V or 5.0 V (with current up to 200 mA) can be supplied from TVDD to the user system (make settings with the debugger)
	Power supply for the emulator		No need (the host computer supplies power through the USB)
Debugging-related items	Break	Software break	ROM area: 2000 points RAM area: Not available
		Hardware break	12 points including those used for both execution and CPU access conditions (8 points only for execution conditions, and 4 points for either execution or access conditions)
		Forced break	Available
	Event	Number of events that can be set	8 points for execution, 8 points for CPU access, 4 points for DMA access, and 4 points for GRAM access
		Available function	Break, trace, performance measurement
		Combination of events	OR, sequential
	Tracing (only for products including an internal tracing function)	Size	Branch only: 2,000 to 4,000 branches Data trace only: 1,000 to 2,000 cycles of access
		Traced data	Branches, cycles of data access, cycles of DMA access, and cycles of GRAM access
		Conditions to start and stop recording of data	Stopping of program execution, event condition settings
		Data-trace conditions	Event conditions
	Performance measurement – Time (1)	Measurement section	From run to break
		Items measured	Execution time
		Performance	32-bit counters
	Performance measurement – Time (2)	Measurement section	From run to break, or between two event points
		Items measured	Execution time, total execution time, pass count, maximum execution time, minimum execution time
		Performance	32-bit counters (for three sections)
	Performance measurement – Other than time	Items measured	Number of instructions executed (all or branches only), number of interrupts accepted (EI level or FE level), number of exceptions accepted (instruction asynchronous or instruction synchronous), clock cycles (all, while interrupts are inhibited, or other than for the processing of interrupts), number of instruction fetches requested, number of hits on the instruction cache
		Measurement section	From run to break, or between two event points
		Items measured	Latest value, total value, pass count, maximum value, minimum value
		Performance	32-bit counters (for four sections)

	Pseudo real-time RAM monitoring	Available (occupies a bus (steals cycles))
	Direct memory modification	Available (occupies a bus (steals cycles))
	Debugging console	Unavailable
	Downloading of the external flash memory	Not possible
	Hot plug-in (requires a separately sold hot plug-in adapter)	Possible
	Peripheral breaks	Available*
	Security	16-byte ID code authentication
	Connection interface	1-pin LPD (500 Kbps/1 Mbps/2 Mbps) or 4-pin LPD (5.5 MHz/11 MHz)
Programming-related items	Security flag settings	Available
	Connection interface	2-wire UART, 1-wire UART

Note: The function to stop peripheral I/O operation in a break is called the peripheral break function.
Whether peripheral breaks are set or not is determined by the debugger.
Refer to the manual for the debugger you are using for how to set them.
Refer to the manual for the MCU you are using to check whether peripheral breaks are set.

4. Notes on Usage

Cautionary notes on using the E1 or E20 emulator are given below.

4.1 Notes on differences in operation between the actual device and the E1 or E20 emulator

No. 1 Cautionary note on the DBTRAP instruction

The DBTRAP instruction is used for software breaks and thus cannot be used in programs with the emulator.

No. 2 Serial programming function

The serial programming function cannot be used with the emulator during debugging.

No. 3 HALT mode

A break leads to release from HALT mode.

No. 4 Current drawn

The amount of current drawn by an emulator is different from the actual device. The target device consumes more power during debugging than in normal operation since the debugging functions are operating.

No. 5 ECC error

When an emulator is started, local RAM, retention RAM, global RAM, and FCU-RAM areas are initialized to H'0000 0000. This leads to the following differences from the actual device.

- The initial values in RAM after starting an emulator are different from the initial values (undefined values)
- ECC errors due to non-initialization of RAM are not detected with the emulator.

To emulate ECC errors, set the following options.

- Initialize the RAM area when the emulator is started: No
- Set OPJTAG in LPD connection before connecting: No

No. 6 OTP flag

Do not set the one-time programming (OTP) flag in self-programming with the emulator. Setting the flag makes further debugging impossible.

No. 7 Operations in response to resets and interrupts when an emulator is in use

When an emulator is in use, operation in response to resets and interrupts differs according to the specifications of the reset mask and interrupt settings, respectively, as shown in the tables below.

Table 4-1 Relation between the State of Emulation and Presence of a Reset Mask

Reset mask specification with an emulator	State of emulation and presence of a reset mask			
	In user program execution	In single stepping	In C-source-level stepping	In breaks
Mask specified	Masked	Masked	Masked	Masked
Mask not specified	Not masked	Masked	Depends on the debugger	Masked

Note: Do not allow the generation of a reset in the form of a pin reset other than while the program is in execution regardless of presence of a mask above.

Table 4-2 Relation between the State of Emulation and Acceptance of Interrupts

Settings for interrupts	State of emulation and acceptance of interrupts			
	In user program execution	In single stepping	In C-source-level stepping	In breaks
DI	Not accepted	Not accepted	Not accepted	Not accepted
EI	Accepted	Some held pending*	Depends on the debugger	Held pending

Note: Exceptions that are held pending are EIINT, FEINT, and FPI, and the other exceptions are all accepted.

No. 8 Option byte register

The debugger cannot write new values to the bits of the option byte register indicated below since they are used by the emulator. Also, do not attempt self-programming to write new values to these bits.

- OPJTAG1 and OPJTAG0 bits (bits 30 and 29 of the OPBT0 register)

The value of the OPJTAG1 and OPJTAG0 bits while an emulator is connected is "01B" if the 4-pin LPD interface is selected and "10B" if the 1-pin LPD interface is selected.

4.2 Cautionary notes on debugging

No. 1 Handling of devices which were used for debugging

Do not use devices that were used for debugging in mass-production. This is because writing to the flash memory of such devices has already proceeded during debugging, so we cannot guarantee the number of times rewriting of the flash memory can proceed. Debugger errors occur when programming of the flash memory is no longer possible. Replace the device in such situations.

No. 2 Power to the target system while debugging

Do not turn the power to the target system off during debugging. Doing so will require reconnection of the debugger.

No. 3 Hardware break (access) function

When the hardware break (access) function is in use, a break in response to the reading or writing of specified data by a read–modify–write instruction will occur after the instruction. Other hardware breaks (access) occur before the instruction.

No. 4 Multiplexed functions of pins used for OCD signals

Multiplexed functions of pins used for on-chip debugging (OCD) cannot be used during debugging.

No. 5 Debugging interface

The E1 and E20 emulators support both 1- and 4-pin LPD interfaces.

Operation is as follows if the setting of the OPJTAG1 and OPJTAG0 bits of the option byte 0 register is "11B" (JTAG: the JTAG interface is selected in the case of a blank chip).

a. When starting (connecting) the E1 or E20 emulator

Settings of the option byte 0 register are changed from the setting for JTAG to that for 1- or 4-pin LPD by the debugger on connection to an emulator.

Therefore, the OPJTAG1 and OPJTAG0 bits of the option byte 0 register are either “10B” (1-pin LPD) or "01B" (4-pin LPD) during emulator operation.

b. When exiting from a session with (disconnecting) the E1 or E20 emulator

Settings of the option byte 0 register can be changed by the debugger.

- The value of the OPJTAG1 and OPJTAG0 bits of the option byte 0 register can be changed to "11B" (for JTAG), which requires rewriting of the flash memory.
- The setting of the OPJTAG1 and OPJTAG0 bits of the option byte 0 register can be left as "01B" (for 4-pin LPD) or "10B" (for 1-pin LPD).

When LPD interface is also used the next time the emulator is connected, we recommend exit from the program without changing the settings from that for the LPD interface.

If power to the target system is turned off because of an abnormal end to the emulator session, the OPJTAG1 and OPJTAG0 bits of the option byte 0 register are not rewritten and so retain the value "01B" (for 4-pin LPD) or "10B" (for 1-pin LPD). If you wish to change the OPJTAG1 and OPJTAG0 bits of the option byte 0 register to "11B" (for JTAG), please do so at the end of the E1 or E20 emulator session.

No. 6 Initialization of RAM areas

All RAM areas for use by a program must be initialized when an emulator is in use. Before the emulator is used, if any setting is made to initialize the RAM area when the emulator is started, ECC errors are not generated since the debugger initializes the RAM area. However, when the actual device is operated with a program which does not initialize the RAM area, ECC errors will be generated, preventing normal program operation.

ROMization is also required because any data downloaded from the emulator to the RAM before program execution will also be initialized. For details, refer to the user's manual for the compiler you are using.

No. 7 Reset of pins

Do not allow the generation of a reset in the form of a pin reset other than while the program is in execution. If a reset is generated in this situation, the debugger may hang. Even if the reset mask setting in the debugger is for masking, the debugger may still hang.

No. 8 Trace function (when a device with a trace function is in use)

The following restrictions apply to the trace function.

- Writing of data in the form of pushing by executing the PUSHSP instruction is not traced.
- In the case of section trace, for example, the instruction immediately before the fetched instruction that actually caused tracing to start might be included in trace data.
- In some cases, acquired trace information will be lost. This depends on the program being executed. The lost information cannot be restored, but the fact of the loss is indicated (displayed). Information might be lost when access to data by the CPU is continuous and frequent.
- When priority in tracing is given to non-realtime, the function to stop tracing when the trace memory becomes full (trace-full stop function) is not usable. To use the trace-full stop function, give priority to realtime.

No. 9 Power-saving modes

When a power-saving mode is in use, the restrictions below apply.

- For debugging of a program, ensure that the program sets WUFMSK0[31] to 0.
- The power supply to the Iso area (CPU, RAM, peripheral module, etc.) is not stopped in the Deep STOP mode during debugging. For this reason, RAM or registers which have undefined initial values retain these values. Be sure to initialize them after returning to the RUN mode.

No. 10 Quality of flash programming

To improve the quality, follow the guidelines below.

- Circuits are designed as described in the user's manuals for the MCU and E1 or E20 emulator.
- The MCU, E1 or E20 emulator, and the software are used as described in respective user's manuals.
- The supply of power to the user system is stable.

No. 11 Turing the power on/off

Turn the power of the E1 or E20 emulator and the user system following the procedure below.

- When a separate power supply is used for the user system

<When using the emulator>

(1) Check the power is off.
Check that the user system is turned off. When using the E20 emulator, check its power switch is off.

(2) Connect the user system.
Connect the emulator and the user system with a user-system interface cable.

(3) Connect the host machine and turn on the emulator.
Connect the emulator and the host machine with a USB interface cable. The E1 emulator is turned on by connecting the USB interface cable. When using the E20 emulator, turn on its power switch.

(4) Turn on the user system.
Turn on the user system.

(5) Launch the debugger.
Launch the debugger.

<When finished using the emulator>

(1) Close the debugger.
Close the debugger.

(2) Turn off the user system.
Turn off the user system.

(3) Turn off the emulator and disconnect the emulator.
When using the E20 emulator, turn off its power switch. Disconnect the USB interface cable from the E1 or E20 emulator. The E1 emulator is turned off by disconnecting from the USB interface cable.

(4) Disconnecting the user system.
Disconnect the user-system interface cable from the user system.

CAUTION

Notes on the User System Power Supply:
While the power of the user system is on, do not turn off the host machine, unplug the USB interface cable, or turn off the power switch of the E20 emulator.
The user system may be damaged due to leakage current.

- When power is supplied to the user system from the emulator (E1 emulator)

<When using the emulator>

(1) Check the power is off.
Check that the user system is turned off.

(2) Connect the user system.
Connect the emulator and user system with a user-system interface cable.

(3) Connect the host machine and turn on the emulator.
Connect the emulator and host machine with a USB interface cable, then turn on the emulator.

(4) Launch the debugger.
Launch the debugger and select the setting of power supply to the user system.

<When finished using the emulator>

(1) Close the debugger.
Close the debugger.

(2) Turn off the emulator and disconnect the emulator.
Disconnect the USB interface cable from the emulator, then turn off the emulator.

(3) Disconnecting the user system.
Disconnect the user-system interface cable from the user system.

No. 12 Software resets and debugging

Resets are always masked during single-step execution and breaks. Whether resets are masked during C-source-level stepped execution depends on the facilities of the debugger. Software resets will not be generated during single step execution in response to processing for setting a software reset, or when the debugger writes to the setting register for a software reset during a break (the request for a reset will be ignored).

No. 13 Interrupts when stepped execution is in use

EIINT, FEINT, and FPI are held pending if they occur during single step execution. Other interrupts are always accepted. Acceptance of interrupts during C-source-level step execution depends on the facilities of the debugger.

No. 14 Stepped execution of the HALT instruction

When a HALT instruction is encountered during single step execution (execution in units of assembly instruction), a break is set at the next instruction following the HALT instruction, and the mode does not change to the HALT mode. When a HALT instruction is encountered during C-source-level stepped execution, whether or not the transition to the HALT mode proceeds depends on the facilities of the debugger.

No. 15 Stepped execution of an instruction which would lead to a transition to the DEEPSTOP mode on the actual device

Stepped execution has two variants: Single step execution (execution in units of assembly instructions) and C-source-level stepped execution (execution in units of statements or functions in C language source code). When an instruction which would lead to a transition to the DEEPSTOP mode on the actual device is executed during single step execution, the program breaks at the address at the time of the reset and does not switch to the DEEPSTOP mode. When an instruction which would lead to a transition to the DEEPSTOP mode on the actual device is executed during C-source-level stepped execution, whether or not the transition to the DEEPSTOP mode proceeds depends on the facilities of the debugger.

No. 16 Cautionary note on connecting an emulator (pin reset)

The reset signal continuing to be asserted while communications between the emulator and MCU are being prepared when the emulator is started raises the possibility of incorrect communications. Thus, ensure that the reset signal does not remain asserted when the emulator is started.

No. 17 Cautionary note on connecting an emulator (time required for preparing to communicate)

When an emulator is connected, a program which was written to the MCU is executed from the reset vector before the OCD emulator and MCU become able to communicate. Take care on this point.

When debugging of a program written to the MCU creates a problem, eliminate the problem by inserting a waiting time* indicated below before executing the program following release from the reset state.

For the 1-pin LPD interface, at least 140-ms waits are required.

For the 4-pin LPD interface, at least 12-ms waits are required.

Note: Time required for preparing communications depends on the host PC environment of the E1 or E20 emulator and the operating frequency of the MCU.

No. 18 Cautionary note on connecting an emulator (internal reset)

When the stored program generates an internal reset (software reset or reset caused by the watchdog timer overflowing) immediately after a release from the initial reset state, the internal reset may be generated before communications between the emulator and MCU have been established after the emulator is started, raising the possibility of incorrect communications.

Accordingly, insert a waiting time* indicated below before applying an internal reset after a release from the initial reset state when debugging a program which includes an internal reset immediately after a release from the initial reset state.

For the 1-pin LPD interface, at least 140-ms waits are required.

For the 4-pin LPD interface, at least 12-ms waits are required.

Note: Time required for preparing communications depends on the host PC environment of the E1 or E20 emulator and the operating frequency of the MCU.

No. 19 Cautionary note on connecting an emulator (DEEPSTOP mode)

When the setting for a mode transition to the DEEPSTOP mode is made immediately after a release from the initial reset state, the MCU switches to the DEEPSTOP mode before communications between the E1 emulator and MCU are established. This raises the possibility of incorrect communications. Accordingly, insert a waiting time* indicated below before executing an instruction which changes the mode to the DEEPSTOP mode after a release from the initial reset state when debugging a program that changes the mode to the DEEPSTOP mode immediately after a release from the initial reset state.

For the 1-pin LPD interface, at least 140-ms waits are required.

For the 4-pin LPD interface, at least 12-ms waits are required.

Note: Time required for preparing communications depends on the host PC environment of the E1 or E20 emulator and the operating frequency of the MCU.

No. 20 Access to I/O resources in the MCU

Access to I/O resources (registers and RAM) in the MCU by the debugger (i.e. access through the memory or I/O register window) proceeds in the same way as access from a user program.

Examples (for the actual operation of I/O resources, refer to the manual of the MCU you are using)

- Access to DTC-RAM resources

  Normal access will not proceed unless a master (i.e. CPU1 or CPU2) is allocated to use the channel. When access is attempted while a master has not been allocated, an error will be detected on the ECM side.
- Access to FCU-RAM resources

  Normal access will not proceed unless the FCU-RAM enable bit is set.
- Access to the PBG guard area

  Attempted access to the PBG guard area will not proceed while the guard is enabled.

No. 21 Cyclic run mode and cyclic stop mode

This item only applies to the F1H group.

When the microcontroller enters the cyclic run mode or cyclic stop mode, the core other than CPU1 is stopped. Debugging must only proceed as asynchronous debugging. That is, synchronous debugging is not usable in this situation. Also, since the core other than CPU1 is stopped during asynchronous debugging, it cannot be debugged.

No. 22 Cautionary point regarding hot plug-in connection

- When the OPJTAG [1:0] bits of the option byte register are not set for the LPD operation mode at the time of hot plug-in connection, a connection error occurs. Thus, before proceeding with hot plug-in connection, set the OPJTAG [1:0] bits for the LPD operation mode.
- Allowing hot plug-in connection prevents usage of the optional isolator for the E1 emulator (the isolator is only for use with the RH850 and RL78 groups).
- Allowing hot plug-in connection prevents the supply of power to the user system by the E1 emulator.
- If hot plug-in connection is not to be used, the RAM area will be initialized* when the emulator is started. Allowing hot plug-in connection prevents this. Thus, when the emulator is started without initializing the RAM area to be used by a program, there are cases where ECC errors occur and programs do not operate normally. Therefore, make sure to initialize the RAM area to be used by a program before setting up the system for hot plug-in connection.
- After completing hot plug-in connection, the user program will be running. At this time, only the emulator functions listed below are available.

  Forced break

  Pseudo real-time RAM monitoring

  Direct changes to values in memory

  Apply a forced break if you wish to return to using all functions supported by the emulator. After the forced break, functions equivalent to those that can be used after normal starting of a program become available.

Note: The RAM area is only initialized if a setting is made to initialize the RAM area when the emulator is started.

No. 23 Cases where hot plug-in connection is not possible

(1) For the F1H group, hot plug-in connection cannot be used when the microcontroller is in any of states listed below.

Reset input state

DEEPSTOP mode
Cyclic run mode
Cyclic stop mode

(2) For the F1M group, hot plug-in connection cannot be used when the microcontroller is in any of states listed below.
Reset input state
Cyclic run mode
Cyclic stop mode

No. 24 Standby mode released by hot plug-in connection

(1) For the F1H group, hot plug-in connection releases the microcontroller from standby if the microcontroller is in the stop mode.

(2) For the F1M group, hot plug-in connection releases the microcontroller from standby when the microcontroller is in any of states below.
Stop mode
DEEPSTOP mode (A reset will occur due to the specifications of the device.)

No. 25 Cautionary note on asynchronous debugging mode (peripheral break function)

This item only applies to the F1H group.

In the asynchronous debugging mode, peripheral break functions cannot be used. Even if peripheral break functions are enabled, peripheral functions are not stopped.

No. 26 Cautionary note on asynchronous debugging mode (reset)

This item only applies to the F1H group.

In the asynchronous debugging mode, when any of CPUs is in the break state, no resets are acceptable.

No. 27 Cautionary note on asynchronous debugging mode (watchdog timer)

This item only applies to the F1H group.

In the asynchronous debugging mode, when any of CPUs is in the break state, counters are stopped in WDTA0, WDTA1, and WDTA2.

No. 28 Cautionary note on asynchronous debugging mode (ECC error)

This item only applies to the F1H group.

During execution of a user program, there may be a case that the ECC error function does not normally operate for flash memory resources.

Example: When any CPU accesses flash memory resources during execution of a user program causing an ECC error and another CPU which is in the break state accesses the same resources in the memory window at the same timing, the debugger temporarily controls the ECC error and no ECC error occurs in any CPU.

No. 29 Cautionary note on asynchronous debugging mode (specific sequence)

This item only applies to the F1H group.

During execution of a user program, there may be a case that the specific sequence is not satisfied.

Example: When any CPU accesses the specific I/O register during execution of a user program and another CPU which

is in the break state accesses the same peripheral function in the I/O register window at the same timing, the specific sequence from any CPU is not satisfied and normal accessing is disabled.

No. 30 Performance measurement

In the case of measuring a specific section, if the intervals between the start and the end of one measurement, and between the end of that measurement and the start of the next is short, the measurement might not be possible. To obtain correct measurements, the interval* should be long enough.

*: The required detection interval depends on the operating frequency and the LPD communications frequency of the MCU.

5. Internal Circuits of the Emulator

The internal interface circuits related to the communications interface between the E1 or E20 emulator and user system are shown in figures A and B below. Please refer to these figures when determining parameters in board design.

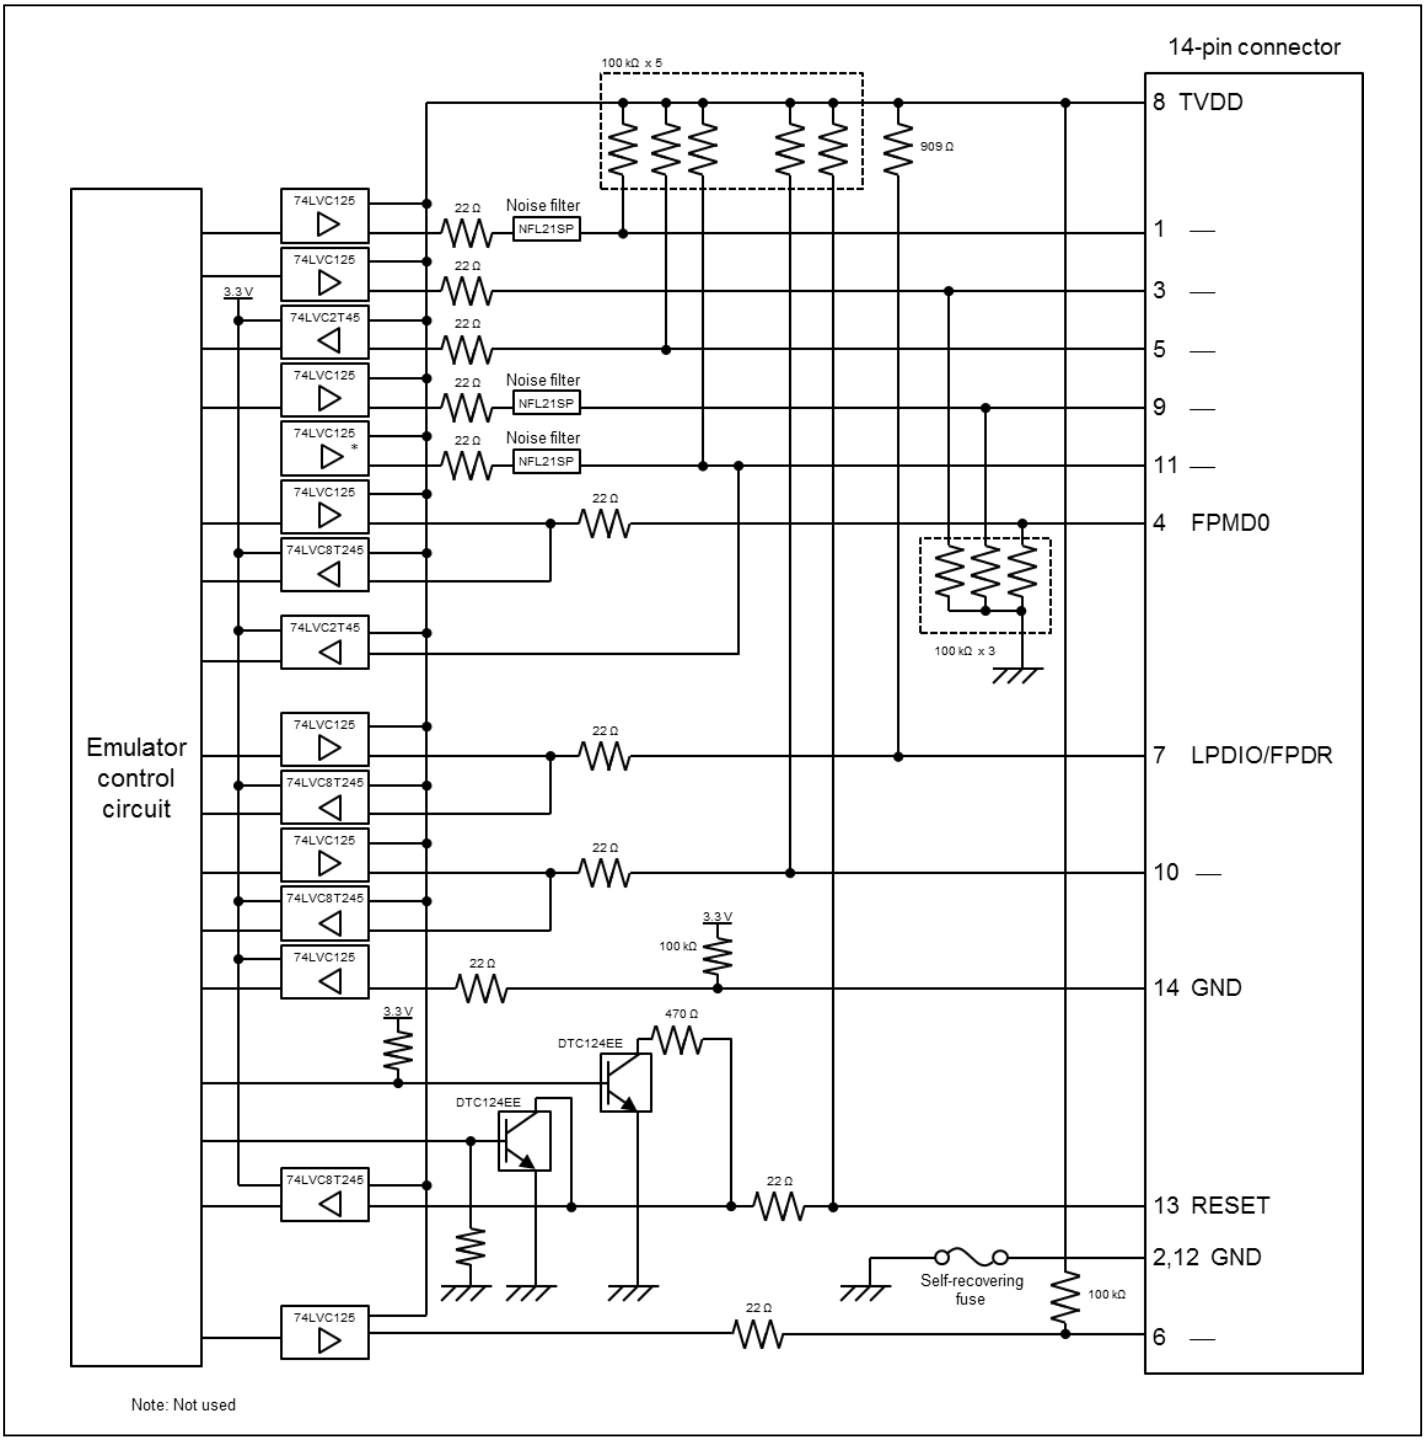

Figure A Interface Circuits in the E1 or E20 Emulator (1-Pin LPD, 1-Wire UART)

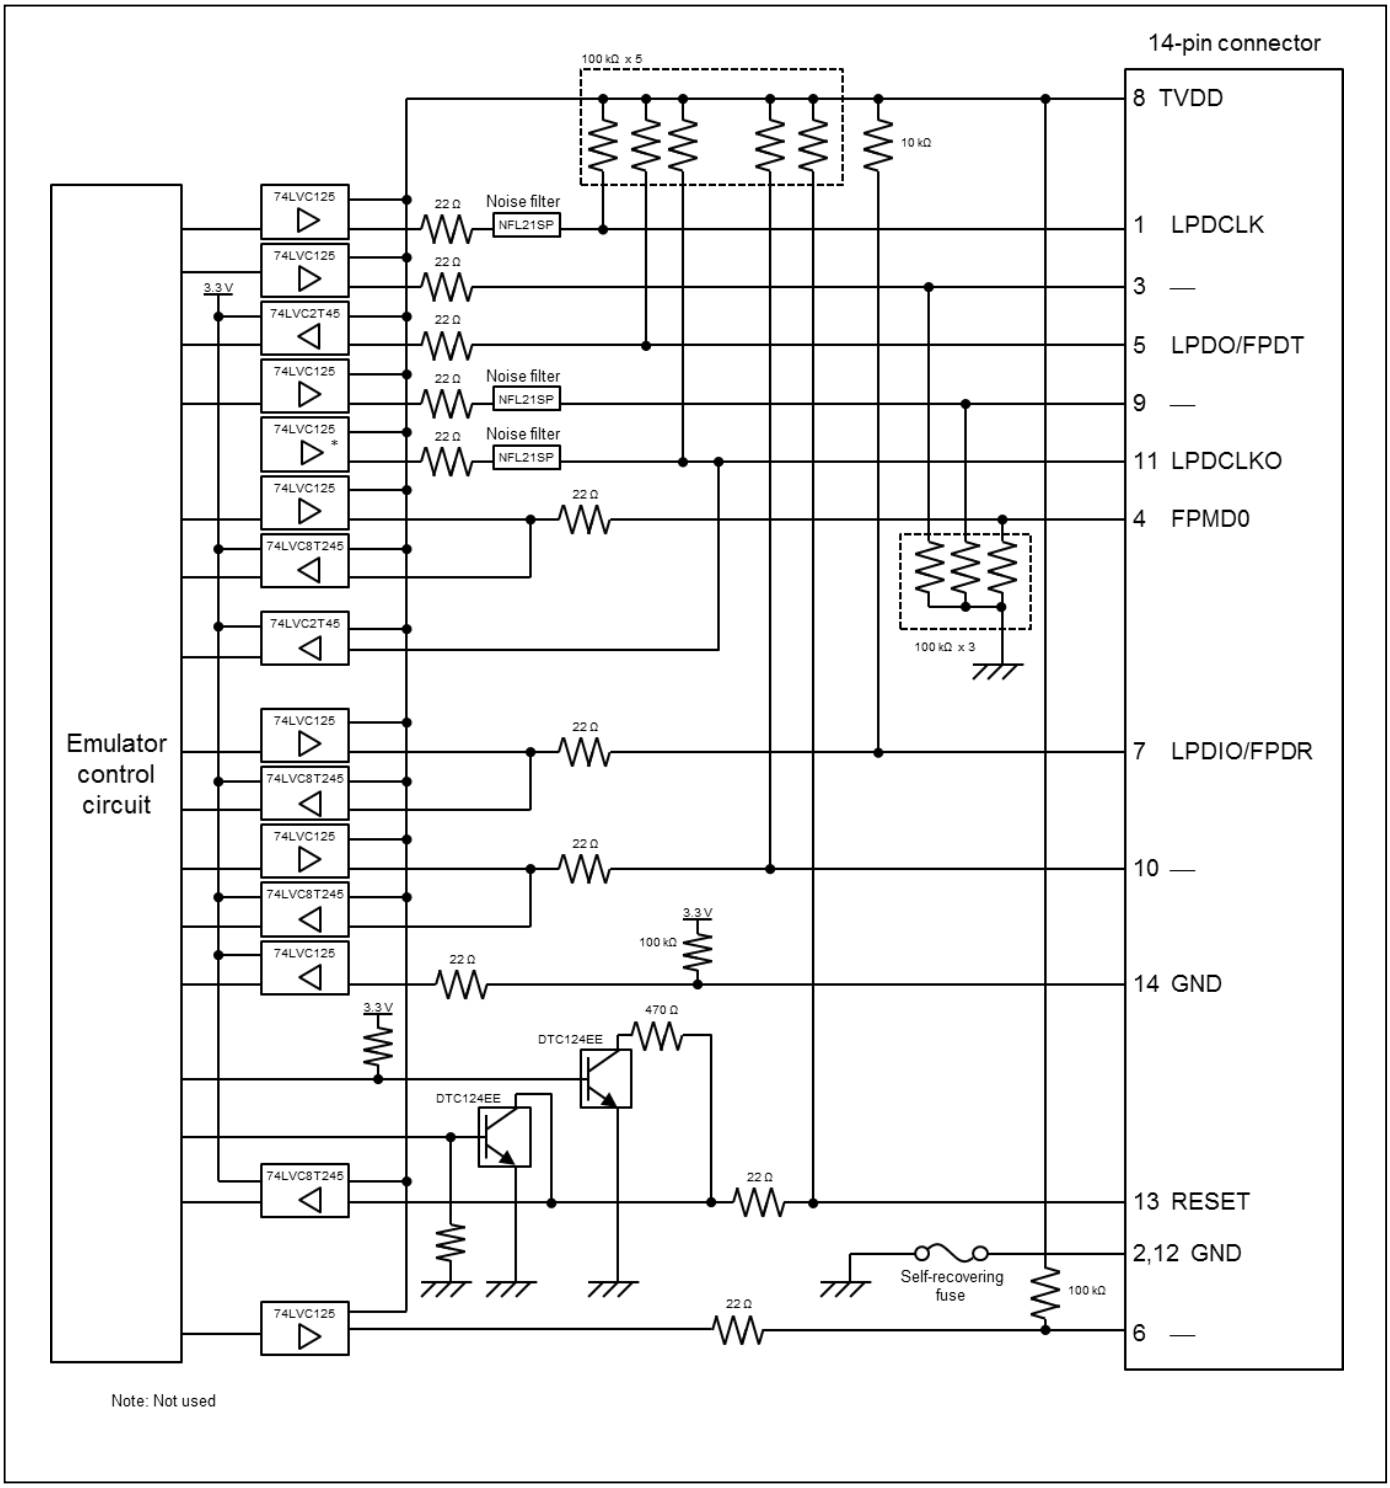

Figure B Interface Circuits in the E1 or E20 Emulator (4-Pin LPD, 2-Wire UART)

E1/E20 Emulator
Additional Document for User's Manual (Notes on Connection of RH850/F1H and RH850/F1M)

Publication Date: Oct 01, 2015 Rev.4.00

Published by: Renesas Electronics Corporation

SALES OFFICES Renesas Electronics Corporation http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information.

Renesas Electronics America Inc.
2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH
Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.
12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

© 2015 Renesas Electronics Corporation. All rights reserved.

Colophon 4.0

E1/E20 Emulator

Additional Document for User's Manual (Notes on Connection of RH850/F1H and RH850/F1M)

Renesas Electronics Corporation

R20UT3116EJ0400